


F Rib Endmills

RNR (Сферическая форма)

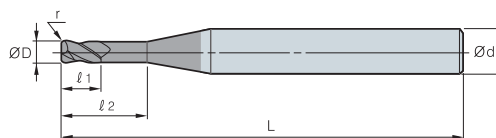

r	ØD	Ød
0	0	-0.004
-0.005	-0.008	-0.008

(mm)

Обозначение		Обозначение		Старое обозначение		r	ØD	Ød	l 1	l 2	L
<div>2</div>	DMAH 010L04R02 RNR	DMVH 010L04R02 RNR	HRNR 010L04R02	0.2	1	4	1.5	4	50		
	015L06R02 RNR	015L06R02 RNR	015L06R02	0.2	1.5	4	2.2	6	50		
	015L08R02 RNR	015L08R02 RNR	015L08R02	0.2	1.5	4	2.2	8	50		
	015L10R02 RNR	015L10R02 RNR	015L10R02	0.2	1.5	4	2.2	10	50		
	015L12R02 RNR	015L12R02 RNR	015L12R02	0.2	1.5	4	2.2	12	50		
	020L06R02 RNR	020L06R02 RNR	020L06R02	0.2	2	4	3	6	50		
	020L10R02 RNR	020L10R02 RNR	020L10R02	0.2	2	4	3	10	50		
	020L12R02 RNR	020L12R02 RNR	020L12R02	0.2	2	4	3	12	50		
	020L10R03 RNR	020L10R03 RNR	020L10R03	0.3	2	4	3	10	50		
	020L06R05 RNR	020L06R05 RNR	020L06R05	0.5	2	4	3	6	50		
	020L10R05 RNR	020L10R05 RNR	020L10R05	0.5	2	4	3	10	50		
	020L12R05 RNR	020L12R05 RNR	020L12R05	0.5	2	4	3	12	50		
	030L10R02 RNR	030L10R02 RNR	030L10R02	0.2	3	6	4	10	60		
	030L12R02 RNR	030L12R02 RNR	030L12R02	0.2	3	6	4	12	60		
	030L10R03 RNR	030L10R03 RNR	030L10R03	0.3	3	6	4	10	60		
	030L12R03 RNR	030L12R03 RNR	030L12R03	0.3	3	6	4	12	60		
	030L12R05 RNR	030L12R05 RNR	030L12R05	0.5	3	6	4	12	60		
	030L16R05 RNR	030L16R05 RNR	030L16R05	0.5	3	6	4	16	60		
	030L20R05 RNR	030L20R05 RNR	030L20R05	0.5	3	6	4	20	60		
	040L12R02 RNR	040L12R02 RNR	040L12R02	0.2	4	6	6	12	60		
040L16R02 RNR	040L16R02 RNR	040L16R02	0.2	4	6	6	16	60			
040L20R03 RNR	040L20R03 RNR	040L20R03	0.3	4	6	6	20	60			
040L12R05 RNR	040L12R05 RNR	040L12R05	0.5	4	6	6	12	60			
040L16R05 RNR	040L16R05 RNR	040L16R05	0.5	4	6	6	16	60			
040L20R05 RNR	040L20R05 RNR	040L20R05	0.5	4	6	6	20	60			

* Серия Rib производится компанией48партнером по согласованию с Korloy