

Н Резцы токарные напайные

Резцы токарные напайные

Кормить направление	Схема обработки	Обозначение	A	B	C	(R)	W	H	L	E	F	Обозначение пластины
Резец проходной упорный тип 33-правый тип			33, 34 - 0									
		1	13	9	3	0.5	13	13	100	4		04-1
		2	16	11	4	0.5	16	16	120	4		04-2
		3	19	13	5	0.5	19	19	140	5		04-3
		4	22	15	6	1	25	25	160	5		04-4
		5	25	17	7	1	25	30	180	5		04-5
		6	30	20	8	1	35	35	200	6		04-6
35 тип			35 - 0									
		1	13	13	3	0.5	13	13	100			07-1
		2	16	16	4	0.5	16	16	120			07-2
		3	18	19	5	0.5	19	19	140			07-3
		4	25	20	6	1	25	25	160			07-4
		5	25	22	7	1	25	30	180			07-5
		6	30	25	8	1	30	35	200			07-6
36 тип			36 - 0									
		1	13	13	3	2.5	13	13	100			06-1
		2	16	16	4	3	16	16	120			06-2
		3	18	18	5	4	19	19	140			06-3
		4	22	22	6	4	25	25	160			06-4
		5	25	25	7	5	25	30	180			06-5
		6	30	30	8	6	30	35	200			06-6
Резец проходной упорный тип 39-правый тип 40-левый			39, 40 - 0									
		1	13	13	3	2.5	13	13	100	7		06-1
		2	16	16	4	3	16	16	120	10		06-2
		3	19	19	5	4	19	19	140	12		06-3
		4	22	22	6	4	25	25	160	13		06-4
		5	25	25	7	5	25	30	180	15		06-5
		6	30	30	8	6	30	35	200	16		06-6
43 тип			43 - 1									
		2	3	8	3		13	19	120		16	08-1
		3	4	13	4		16	22	140		20	08-3
		4	5	15	5		18	25	160		25	08-4
		5	6	17	6		22	32	180		30	08-5
		6	8	20	8		25	38	200		40	08-6
		Резец проходной упорный тип 49-правый тип 50-левый			49, 50 - 1							
		2	6	10	4		16	16	120			05-2
		3	7	12	5		19	19	140			05-3
		4	9	16	6		25	25	160			05-4

Напайной инструмент

Н