


# Кукурузные сборные фрезы с хвостовиком ВТ

## ВТ30/40 АМ1000/1500

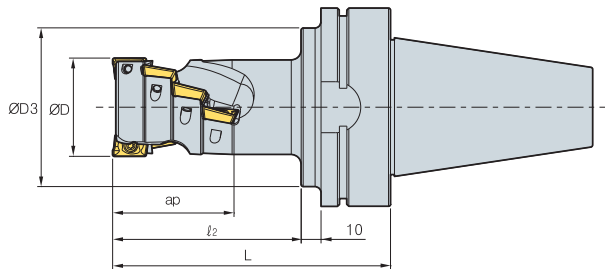

AA  
90°  
• AR : -12.5°~13°  
• RR : -17°~6°

Обозначение		$\varnothing D$	$\varnothing D_3$	$l_2$	L	Количество зубьев	ap
<b>ВТ30</b> AM1016015-2	6	16	80	30	62	2	15.5
AM1020020-3	12	20	80	32	64	3	20.5
AM1025025-4	20	25	80	39	71	4	25.5
<b>ВТ40</b> AM1016015-2	6	16	80	30	67	2	15.5
AM1020020-3	12	20	80	32	69	3	20.5
AM1025025-4	20	25	80	39	76	4	25.5
<b>ВТ30</b> AM15020026-1	3	20	80	42	74	1	26.5
AM15025035-2	8	25	80	50	62	2	35
AM15032044-2	10	32	80	60	92	2	44
<b>ВТ40</b> AM15020026-1	3	20	80	42	79	1	26.5
AM15025035-2	8	25	80	50	87	2	35
AM15032044-2	10	32	80	60	97	2	44


### Применяемые СМП

#### APMT-MM



Тип	Обозначение	Тв. сплав с покрытием								Кермет			Тв. сплав				Стр.	
		NCM325	NCM335	NC5330	PC3500	PC5300	PC3545	PC9530	PC6510	PC215K	PD2000	CN2000	CN20	CN30	H01	G10		ST30A
1000 Тип	APMT 060202PDSR-MM			•	•	•	•											
	0602PDSR-MM			•	•	•	•	•										
	060208PDSR-MM			•	•	•	•	•	•									
	060212R-MM			•	•	•	•											
	060216R-MM				•	•	•											
1500 Тип	APMT 0903PDSR-MM			•	•	•	•	•										
	090308PDSR-MM			•	•	•	•	•										
	090312R-MM				•	•	•	•										
	090316R-MM				•	•	•											
	090320R-MM				•	•	•											

### Рекомендации по выбору СМП

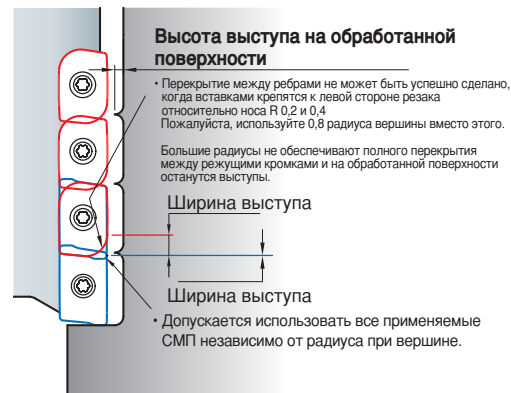

### Комплектующие



Тип	Винт кассеты	Ключ	Ключ	Диаметр фрезы, мм
1000 Тип	FTKA01842	-	TW06S-A	Ø10~Ø63
1500 Тип	FTKA02565S	TW08S	-	Ø16~Ø100