



Патроны фрезерно4сверлильные серии NPM I

HSK-NPM

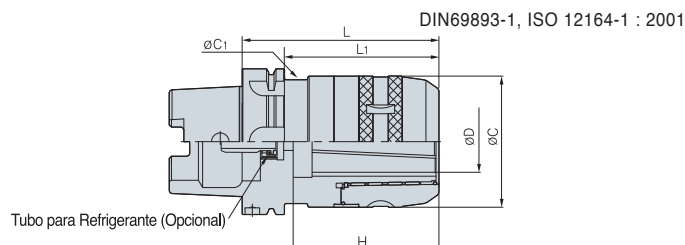

Обозначение	ØD	ØC	ØC1	L	L1	H	Втулка переходная	kg
HSK 50A - NPM20-100	20	54	55	100	74	75	CS20, C20	0.5
HSK 63A - NPM20-100	20	54	55	100	64	75	CS20, C20	1.7
NPM32-120	32	75	75	120	94	90	CS32, C32	2.5
HSK100A - NPM20-110	20	54	55	110	81	75	CS20, C20	1.6
NPM32-130	32	75	75	130	106	90	CS32, C32	3.6
NPM42-135	42	90	90	135	106	100	CS42, C42	5.0

BT-NPM

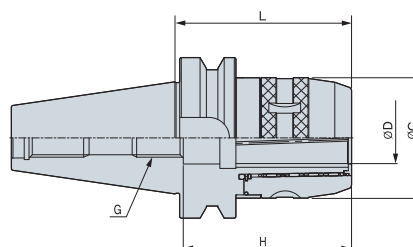

Обозначение	ØD	L	ØC	H	G	Втулка переходная	kg
BT30 - NPM20 - 85	20	85	54	85	M12	CS20, C20	0.8
BT40 - NPM20 - 85	20	85	54	85	M16	CS20, C20	1.5
100	20	100	54	85	M16	CS20, C20	1.9
135	20	135	54	85	M16	CS20, C20	2.3
NPM32 - 110	32	110	75	95	M16	CS32, C32	2.5
120	32	120	75	95	M16	CS32, C32	3.1
135	32	135	75	95	M16	CS32, C32	3.3
BT50 - NPM20 - 95	20	95	54	85	M16	CS20, C20	1.7
125	20	125	54	85	M16	CS20, C20	2.0
165	20	165	54	85	M16	CS20, C20	2.4
NPM32 - 110	32	110	75	105	M24	CS32, C32	4.8
135	32	135	75	105	M24	CS32, C32	5.3
165	32	165	75	105	M24	CS32, C32	6.3
NPM42 - 110	42	110	90	125	M24	CS42, C42	5.4
135	42	135	90	125	M24	CS42, C42	6.0
165	42	165	90	125	M24	CS42, C42	7.3

Комплектующие

Патрон	Комплектующие		
	не входящие в базовую комплектацию		
	Втулка переходная	Ключ	Штуцер для подвода СОЖ
Серия			
NPM20	CS20, C20	57-60	CTC20
NPM32	CS32, C32	75-79	CTC32
NPM42	CS42, C42	92-96	CTC42

