


HSK-HPM

DIN69893-1, ISO 12164-1 : 2001

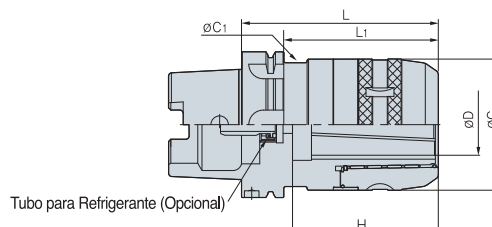


(мм)

Обозначение	ØD	ØC	ØC1	L	L1	H	Втулка переходная	kg
HSK 50A - HPM20-100	20	54	55	100	74	75	CS20, C20	0.5
HSK 63A - HPM20-100	20	54	55	100	64	75	CS20, C20	1.4
HPM32-120	32	75	75	120	94	90	CS32, C32	2.1
HSK100A - HPM20-110	20	54	55	110	81	75	CS20, C20	1.3
HPM32-130	32	75	75	130	106	90	CS32, C32	3.0
HPM42-135	42	90	90	135	106	100	CS42, C42	4.8

BT-HPM

DIN69893-1, ISO 12164-1 : 2001

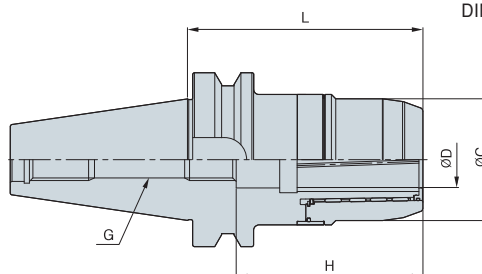

(мм)

Обозначение	ØD	ØC	L	G	H	Втулка переходная	kg	Максимальная частота вращения, об/мин
BT30 - HPM20 - 85	20	54	85	M12	85	CS20, C20	0.7	25,000
BT40 - HPM20 - 85	20	54	85	M12	85	CS20, C20	1.3	20,000
100	20	54	100	M12	85	CS20, C20	1.6	20,000
135	20	54	135	M12	85	CS20, C20	2.0	20,000
HPM32 - 110	32	75	110	M16	95	CS32, C32	2.3	20,000
120	32	75	120	M16	95	CS32, C32	2.8	20,000
135	32	75	135	M16	95	CS32, C32	3.1	20,000
BT50 - HPM20 - 95	20	54	95	M12	85	CS20, C20	1.7	15,000
125	20	54	125	M12	85	CS20, C20	2.0	15,000
165	20	54	165	M12	85	CS20, C20	2.3	15,000
HPM32 - 110	32	75	110	M16	105	CS32, C32	4.1	15,000
135	32	75	135	M16	105	CS32, C32	5.1	15,000
165	32	75	165	M16	105	CS32, C32	5.5	15,000
HPM42 - 110	42	90	110	M24	125	CS42, C42	5.2	15,000
135	42	90	135	M24	125	CS42, C42	5.9	15,000
165	42	90	165	M24	125	CS42, C42	6.8	15,000

Комплектующие

Комплектующие			
Патрон	Входящие в базовую комплектацию	Не входящие в базовую комплектацию	
	Штуцер для подвода СОЖ	Втулка переходная	Ключ
Серия			
HPM20	CTC20	CS20, C20	HS20
HPM32	CTC32	CS32, C32	HS32
HPM42	CTC42	CS42, C42	HS42

